

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25

Supplementary information

Dehalogenation of diatrizoate using nanoscale zero-valent iron: impacts of various parameters and assessment of aerobic biological post-treatment

Pan-Pan He, Chuan-Shu He, Qi Liu, Yang Mu*

CAS Key Laboratory of Urban Pollutant Conversion, Collaborative Innovation Centre of Suzhou Nano Science and Technology, Department of Chemistry, University of Science and Technology of China, Hefei, China

***Corresponding author:**

Prof. Yang Mu, Fax: +86 551 63607907; E-mail: yangmu@ustc.edu.cn

There are 7 pages in supporting information, including 1 table and 4 figures, detailed descriptions about the DABA sorption experiment.

26 **DABA adsorption experiments by nZVI**

27 100 mL of 30 μ M DABA solution was added into a 150 mL serum bottle with
28 pH at 7.0, then was purged with nitrogen for 15 min. Further, 0.05 g nZVI was added
29 into the solution in the anaerobic operation box, and then the bottle was immediately
30 sealed tightly with rubber stoppers and aluminum caps following with continuous
31 shaking with 150 rpm at 25°C for 120 h by using a bath shaker.

Table S1 Summary of LC-ESI-MS parameters for intermediates identification

Source Voltage (kV):	4
Source Current (uA):	12.75
Vaporizer Thermocouple OK:	Yes
Vaporizer Temp (C):	80
Sheath Gas Flow Rate (arb):	20.00
Aux Gas Flow Rate(arb):	5.00
Sweep Gas Flow Rate(arb):	0.02
Capillary Temp OK:	Yes
Capillary Voltage (V):	35.00
Capillary Temp (C):	275
Tube Lens Voltage (V):	40



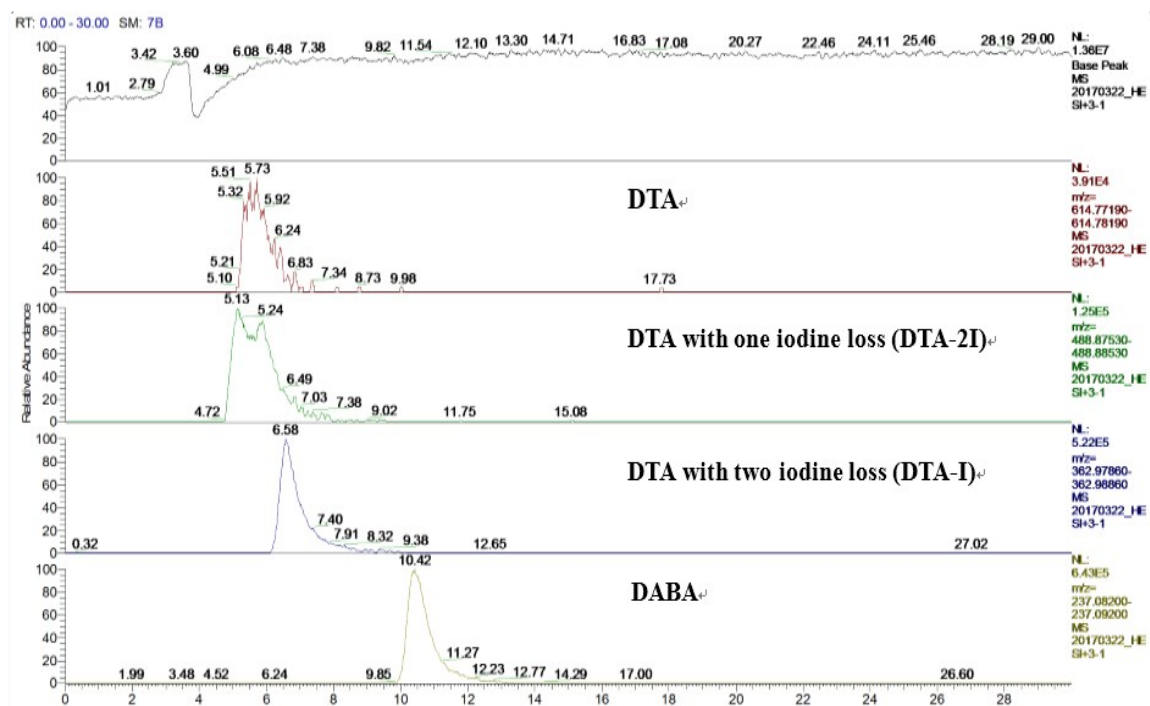


Figure S1 Liquid chromatography of LC-ESI-MS for the identification of products from DTA dehalogenation using nZVI


20170322_HESI+3-1#393 RT: 5.73 AV: 1 NL: 2.81E4
T: FTMS+c ESI Full ms [100.00-800.00]

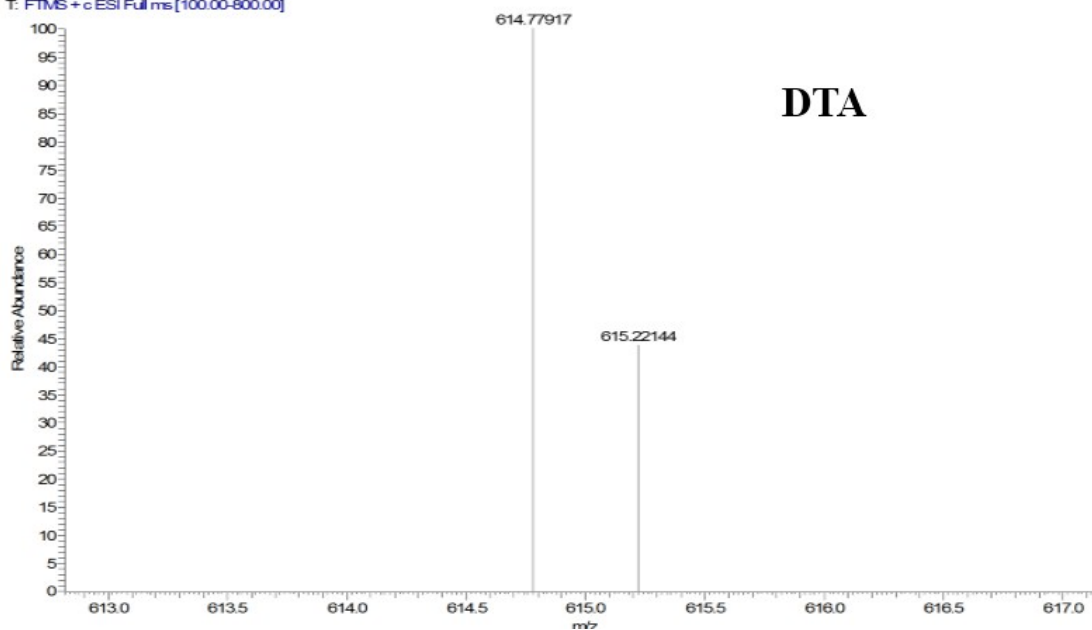

20170322_HESI+3-1#352 RT: 5.13 AV: 1 NL: 1.74E5
T: FTMS+c ESI Full ms [100.00-800.00]

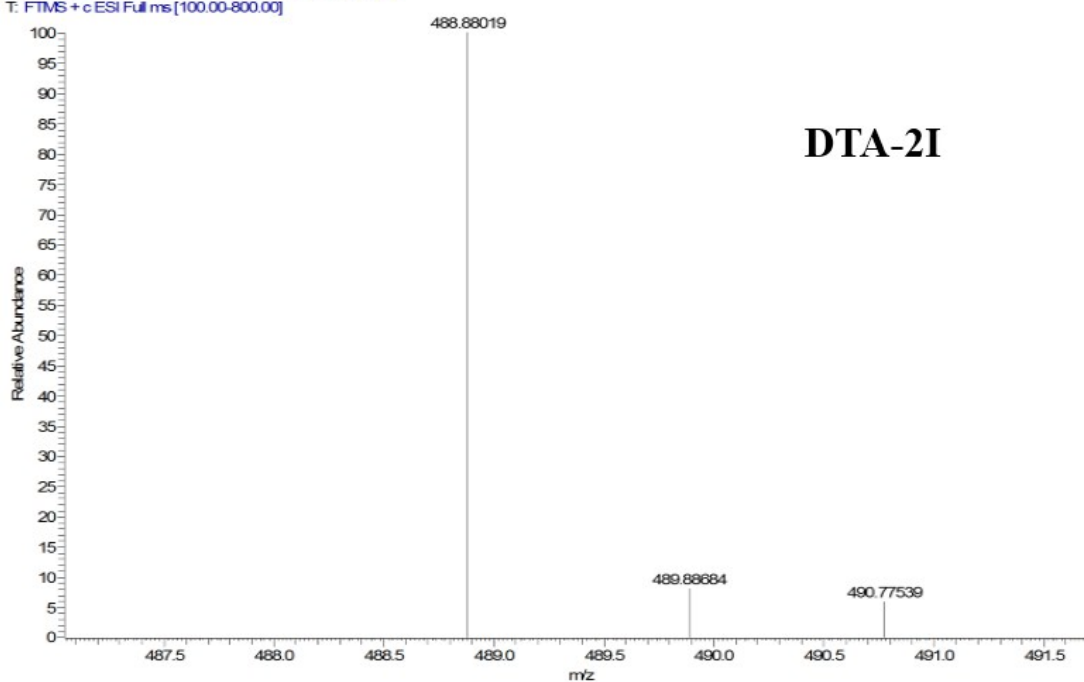

20170322_HESI+3-1#454 RT: 6.62 AV: 1 NL: 5.30E5
T: FTMS+ c ESI Full ms [100.00-800.00]

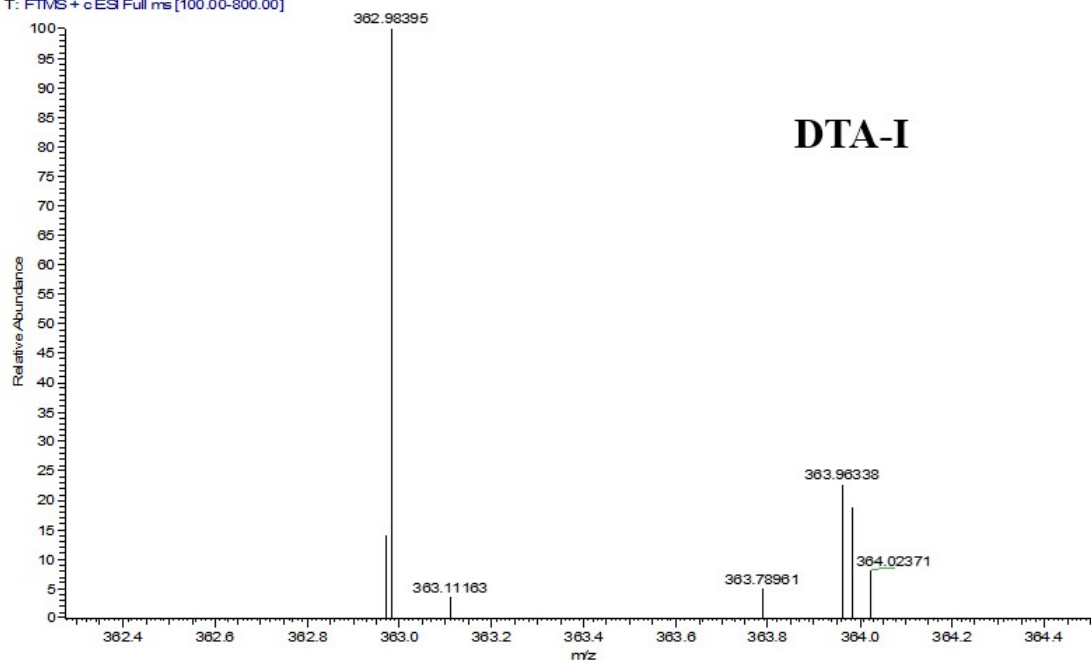

20170322_HESI+3-1#726 RT: 10.59 AV: 1 SB: 2 0.01-0.02 NL: 5.42E5
T: FTMS+ c ESI Full ms [100.00-800.00]

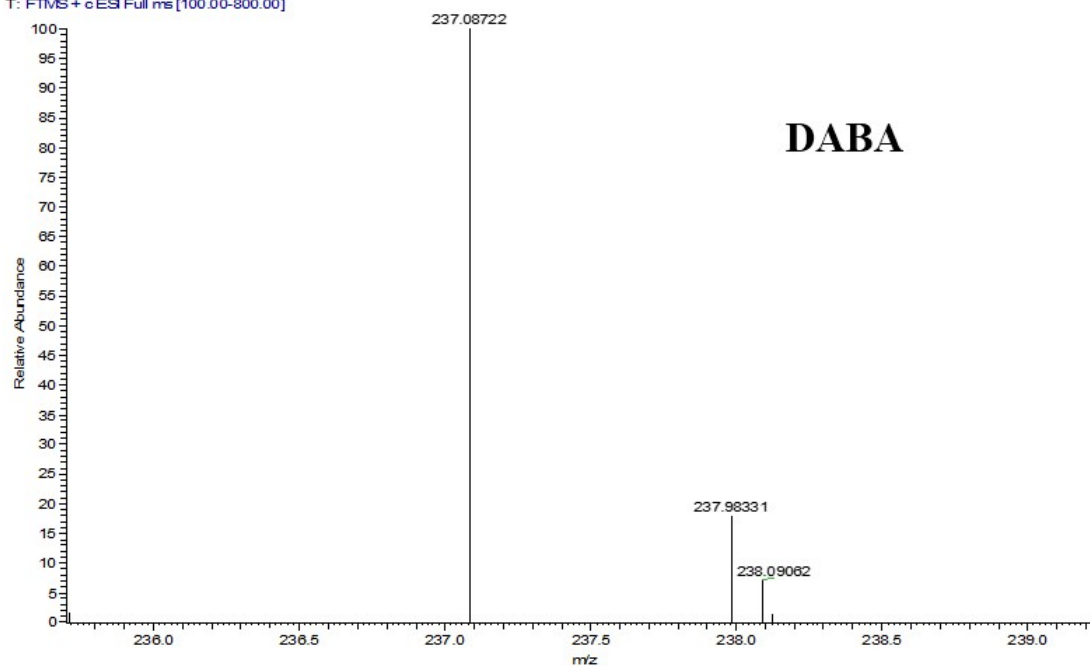


Figure S2 Mass spectrometry of LC-ESI-MS for the identification of products from DTA dehalogenation using nZVI

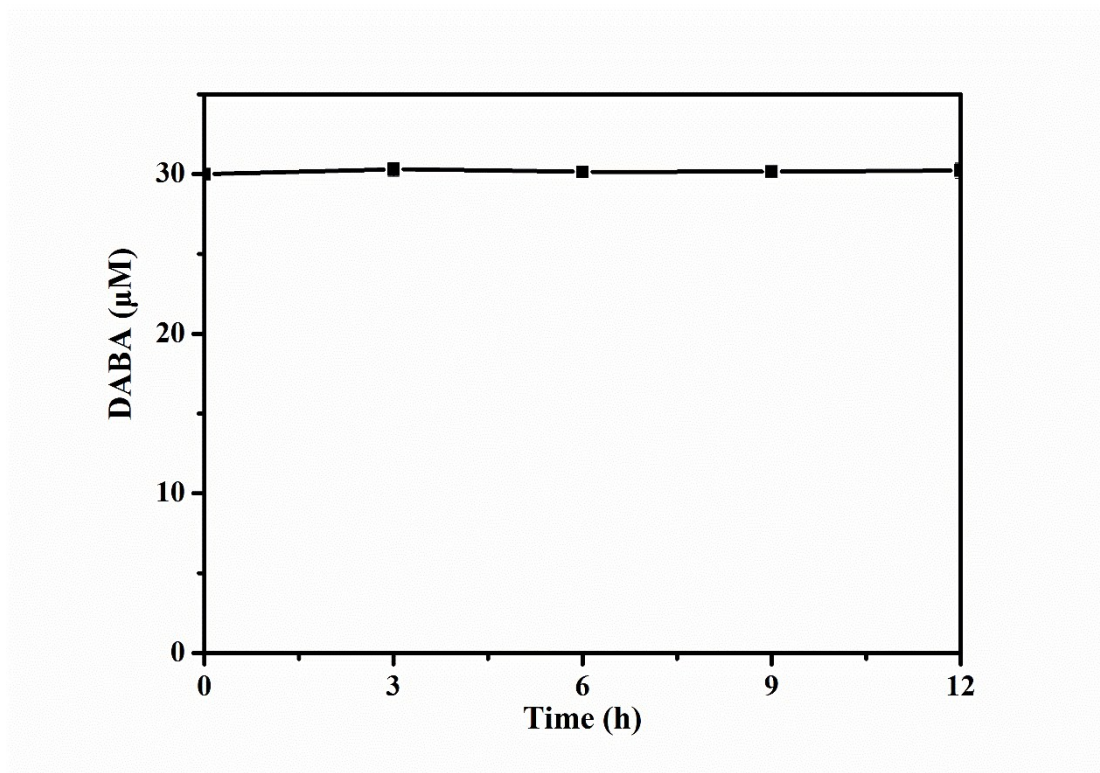


Figure S3 Change of DABA concentration for DABA adsorption experiments by nZVI

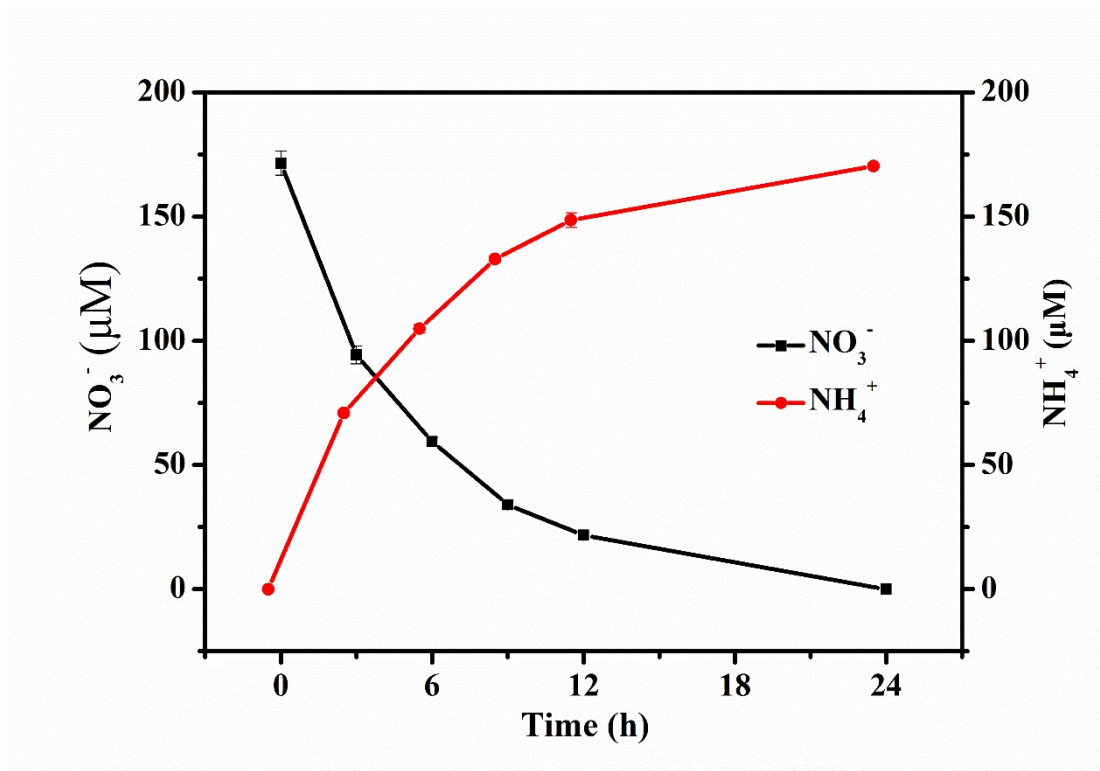


Figure S4 Reduction of NO_3^- and formation of NH_4^+ during DTA dehalogenation by nZVI in the presence of $10 \text{ mg L}^{-1} \text{ NO}_3^-$.